


Double Hanging Outdoor Swing 985022

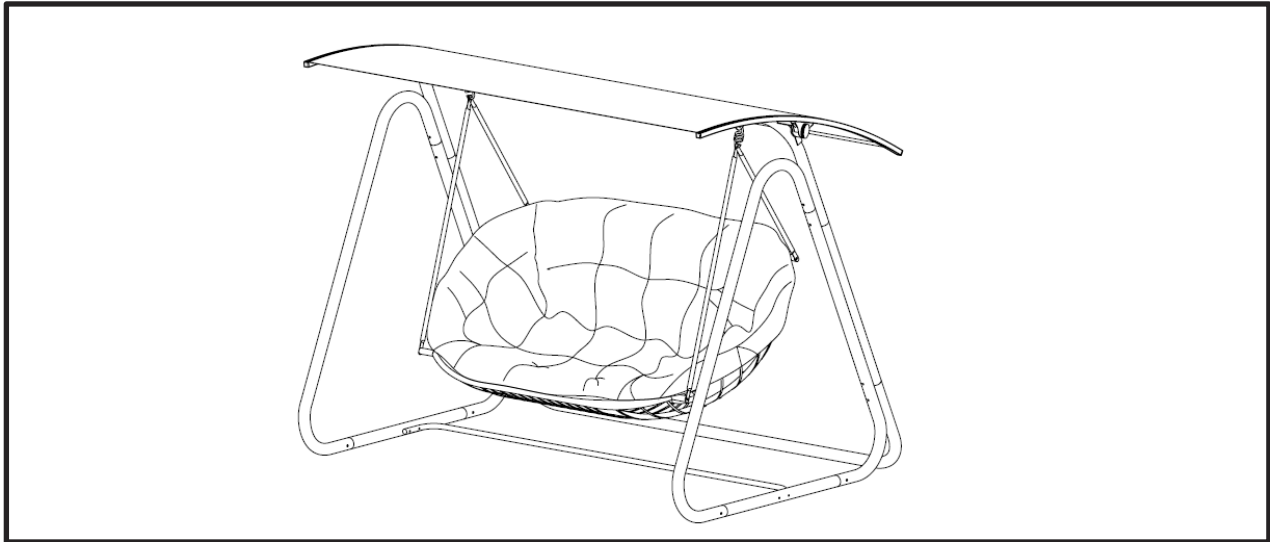

BEFORE YOU START












- Retain these instructions for future reference.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Do not use power tools to construct this product.
- Ensure that this product is fully assembled as illustrated before use.


 
 








WARNINGS

- Two people are required to assemble this product.
- Do not stand on the hanging swing chair.
- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Keep small parts out of reach of children.
- Check all screws or bolts are tightened and inspect regularly.
- Do not tighten screws until fully assembled.
- Do not overtighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- This product is for domestic use only.
- Each chair seat is intended for a maximum weight of 110kg. The whole set has a weight tolerance of 220kg. Do not exceed this weight.

PARTS & FITTINGS SUPPLIED







HANGING SWING CHAIR

| Ref | Description | Illustration | QTY |
|-----|-------------|--|-----|
| A | Swing top |  | 1 |
| B | Tube |  | 2 |
| C | Tube |  | 2 |
| D | Tube |  | 2 |
| E | Tube |  | 2 |
| F | Tube |  | 1 |
| G | Tube |  | 1 |
| H | Tube |  | 1 |
| I | Swing frame |  | 1 |
| J | Tube |  | 2 |
| K | Tube |  | 2 |

| Ref | Description | Illustration | QTY |
|-----|-------------|---|-----|
| L | Cushion |  | 1 |
| AA | Screw M8105 |  | 8 |
| BB | Screw M860 |  | 4 |
| CC | Screw M680 |  | 4 |
| DD | Screw M615 |  | 4 |
| EE | Bolts M8 |  | 24 |
| FF | Bolts M8 |  | 12 |
| GG | Bolt cap |  | 12 |
| HH | Bolts M8 |  | 12 |
| II | Bolts M6 |  | 12 |
| JJ | Bolts M6 |  | 4 |

DOBBIES INSTRUCTION MANUAL



| Ref | Description | Illustration | QTY |
|-----|-----------------|--|-----|
| KK | Bolt cap |  | 8 |
| LL | Bolts M6 |  | 4 |
| MM | Adjustable feet |  | 2 |
| NN | Spring |  180° | 2 |
| OO | Allen key |  | 1 |
| PP | Spanner |  | 1 |

ASSEMBLY IMAGES & STEPS HANGING SWING CHAIR

Figure 1:

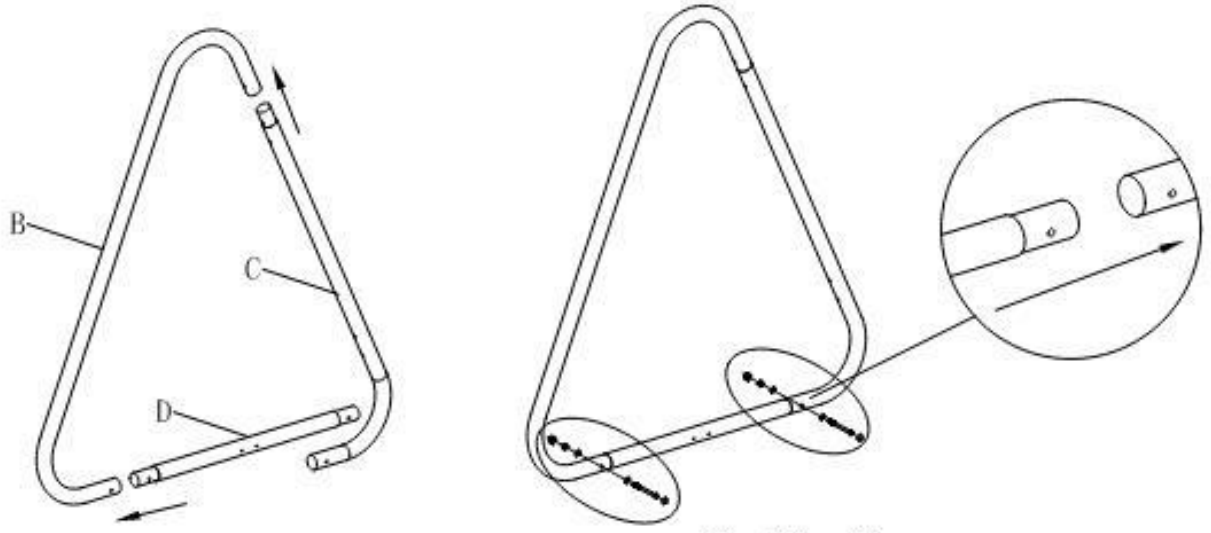


Figure 2:

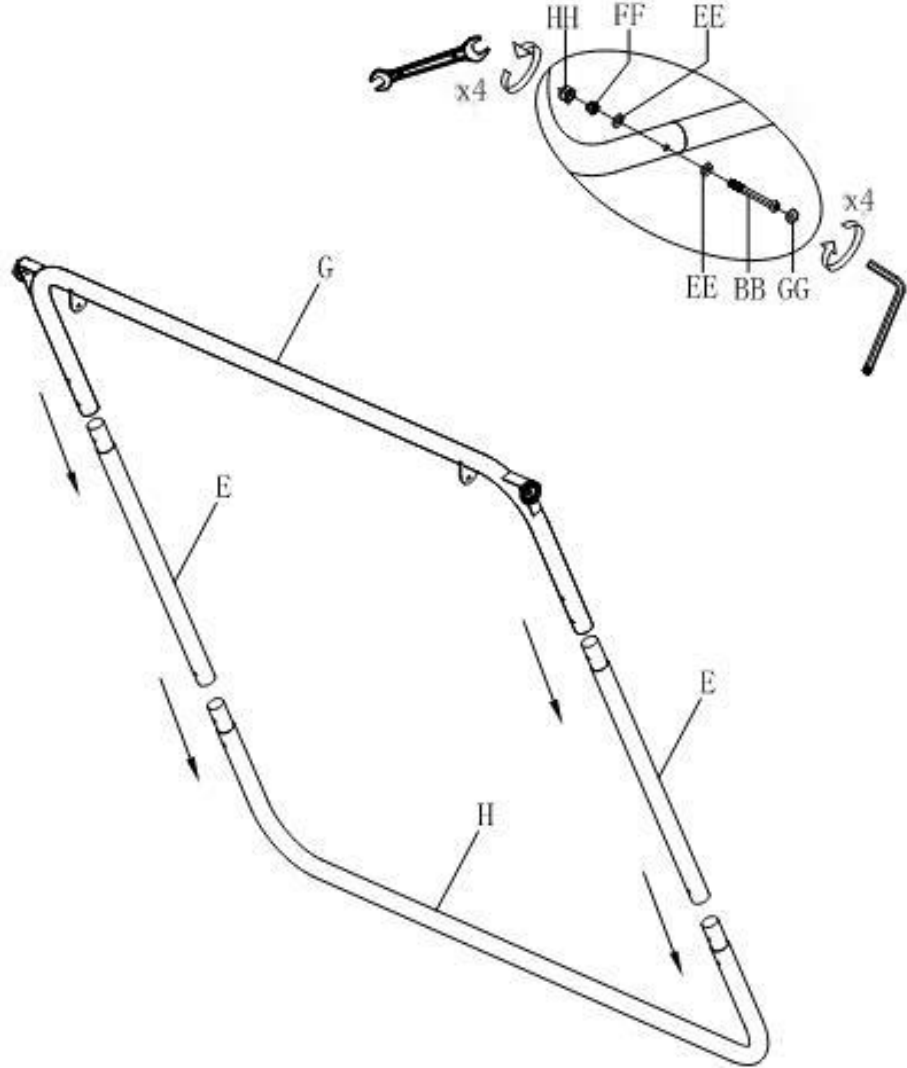


Figure 3:

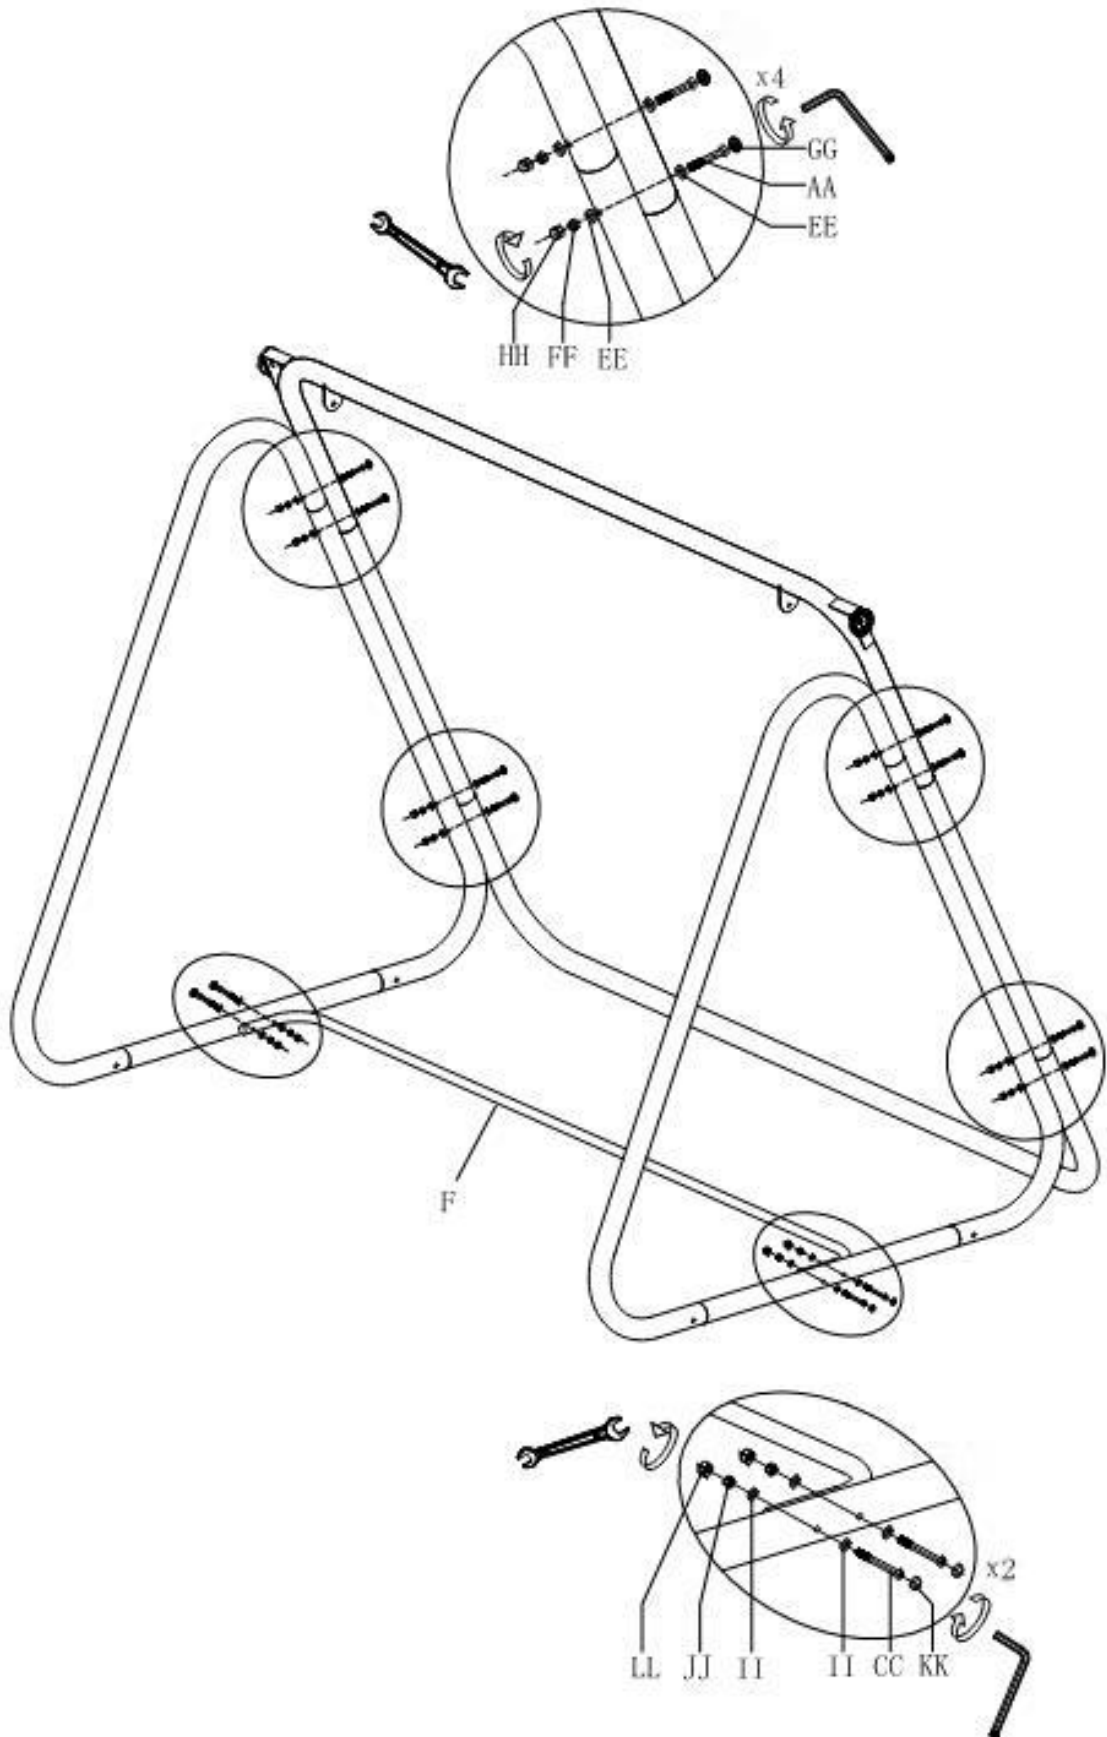


Figure 4:


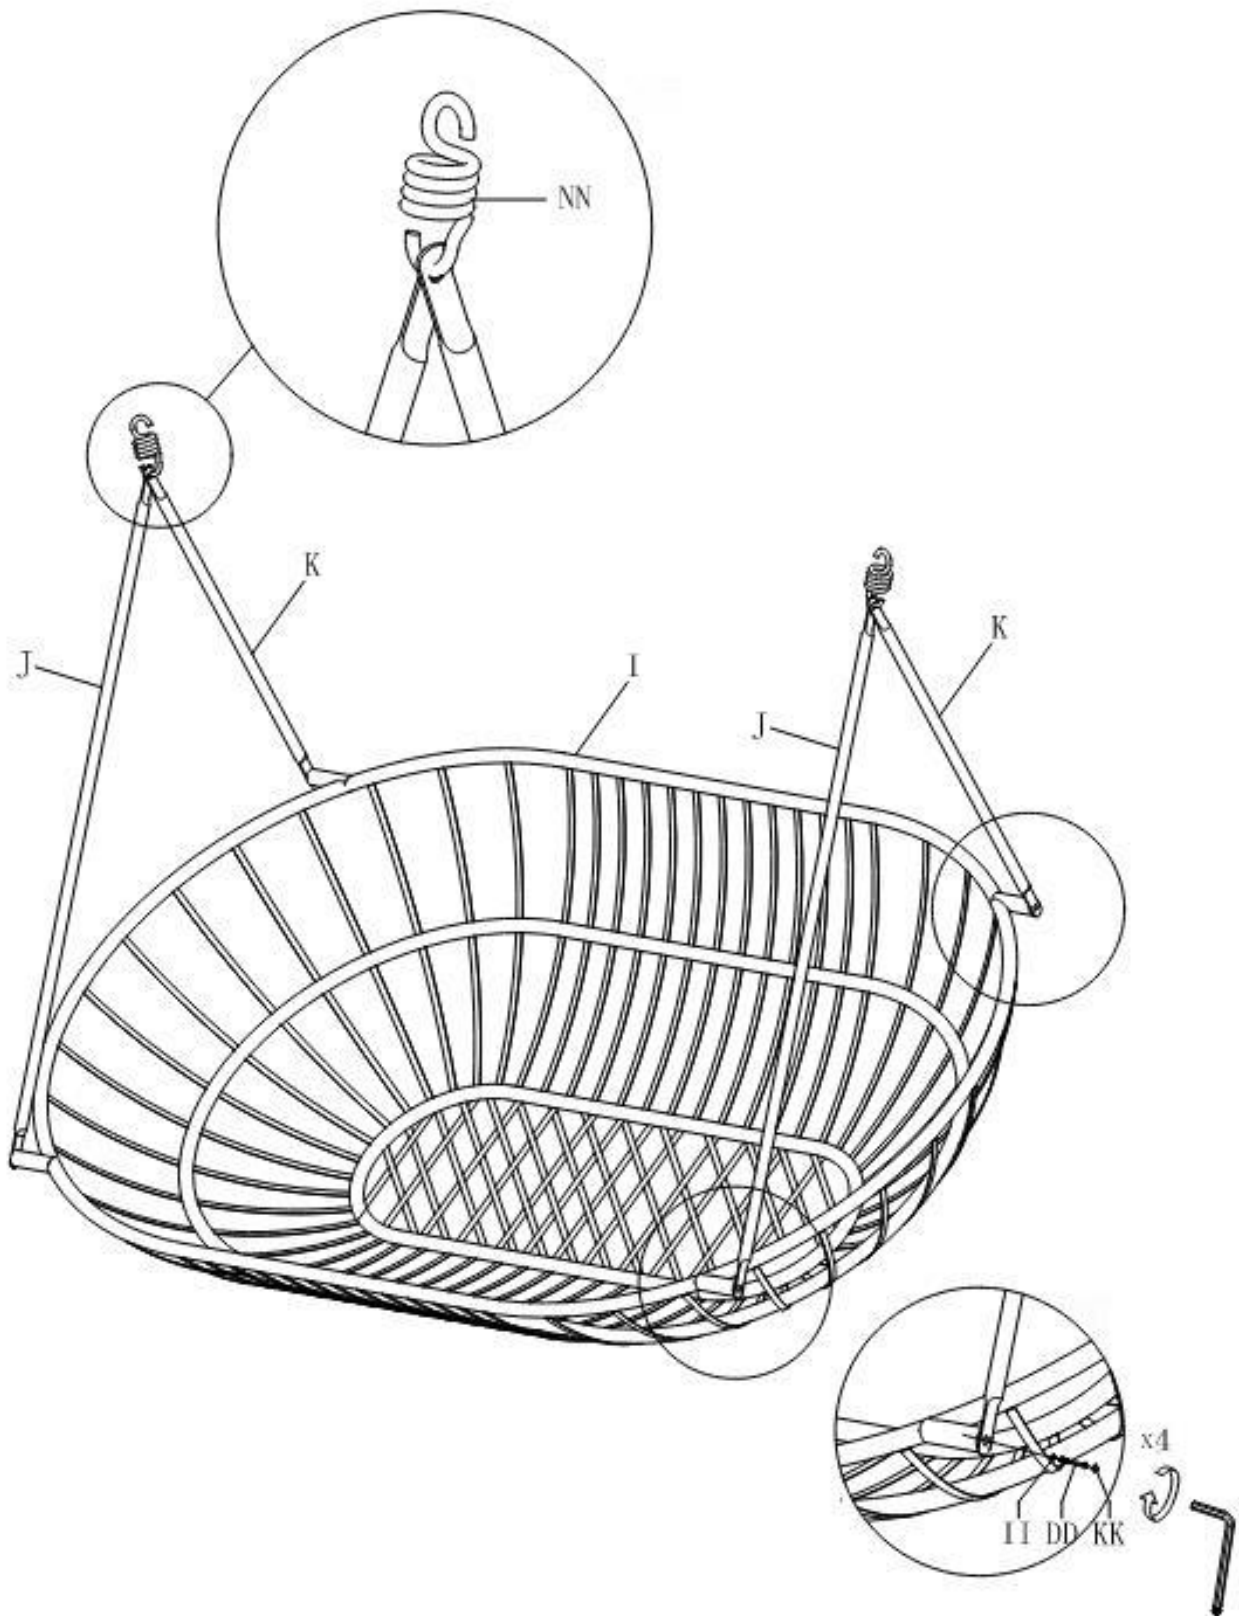


Figure 5

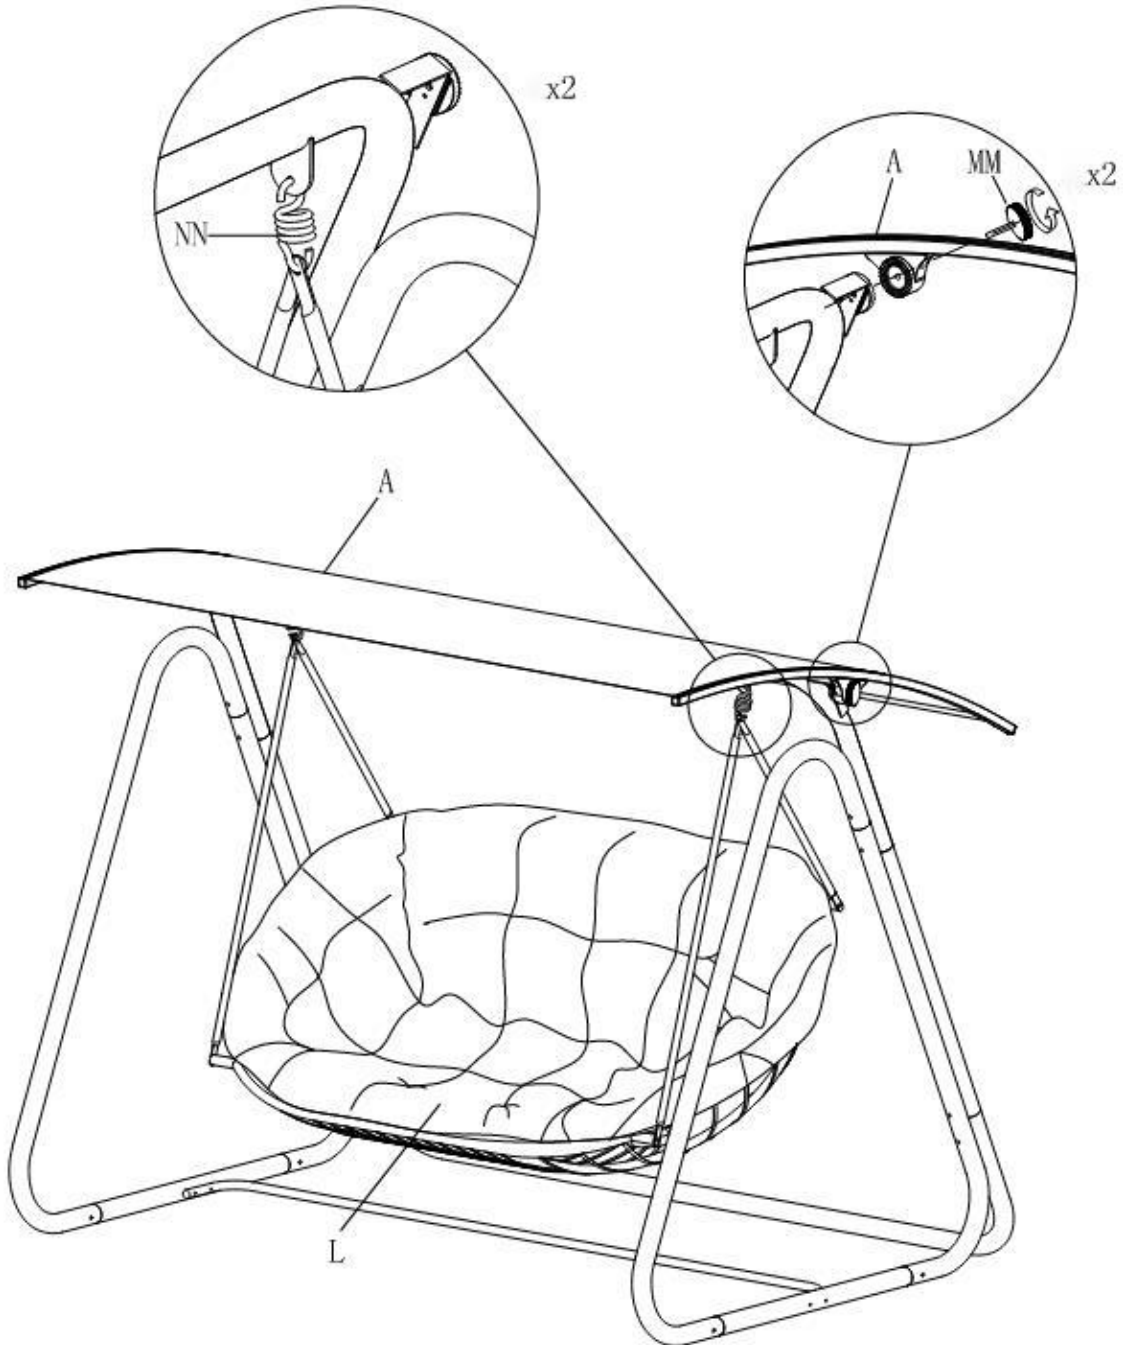

CARE INSTRUCTIONS

- To clean, wipe with a sponge and warm soapy water then wipe with a dry, clean cloth. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- Never use a pressure hose or washer to clean the product. Never use scourers, abrasives or chemical cleaners.
- Store the product in a cool, dry place. Before storage ensure that the product is clean and dry. We recommend the use of furniture covers to protect your product when not in use.
- Please note, the cushions are not waterproof and should not be left out in the rain.
- Please store the cushions in a cool, dry place when not in use.
- Please keep away from sources of extreme heat and naked flames.
- Periodically check all fixings to ensure none have come loose and re-tighten when necessary.
- Avoid sharp objects as these can damage or scratch the product.
- During bad weather and winter months, bring product indoors where possible or use a breathable furniture cover.

CONTACT

CUSTOMER SERVICES - EMAIL: CUSTOMER.SERVICE@DOBBIES.COM. TELEPHONE NUMBER: 0131 561 6406 OR CONTACT YOUR LOCAL STORE.
DOBBIES GARDEN CENTRES LTD, MELVILLE NURSERY, LASSWADE, MIDLOTHIAN, EH18 1AZ