Arlo outdoor sofa set 985017





BEFORE YOU START

- Retain these instructions for future reference.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Do not use power tools to construct this product.
- Ensure that this product is fully assembled as illustrated before use.

WARNINGS

- Do not sit or stand on the table. Do not stand on the sofa.
- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Keep small parts out of reach of children.
- Check all screws or bolts are tightened and inspect regularly.
- Do not tighten screws until fully assembled.
- Do not overtighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- This product is for domestic use only.
- Each seat on the sofa is intended for a maximum weight of 110kg. Do not exceed this weight.

PARTS & FITTINGS SUPPLIED TABLE

Ref	Description	Illustration	QTY
A	Side panel		2
В	Side panel		2
С	Table top		1
D	Glass		1
E	Bolts M630	Cananana	10
F	Washer	Φ13*Φ6.5*1.0mm	10
G	Bolts cover	\bigcirc	10
Н	Allen key		1



Ref	Description	Illustration	QTY
A	Side panel		1
В	Back panel		1
C	Seat panel		1
D	Bolts M660		7
E	Washer	¢13*¢6.5*1.0mm	14
F	Nuts M6		7
G	Spanner	50	7
Н	Bolt cover		1
J	Allen key		1
К	Cushion		1
L	Cushion		1

SOFA Ref	Description	Illustration	QTY
A	Arm panel		1
В	Back panel		1
С	Seat panel		1
D	Bolts M660		7
E	Washer	¢13*¢6.5*1.0mm	14
F	Nuts	M6	7
G	Spanner	5	1
H	Bolts cover	\bigcirc	1
J	Allen key		1
К	Cushion		1
L	Cushion		1



ASSEMBLY IMAGES & STEPS Table

Figure 1:



Figure 2:





Figure 3:



Figure 4:



Sofa

Figure 5:



Figure 6:

,





Figure 7:



Figure 8:



Figure 9:



Figure 10:





Figure 12:



CARE INSTRUCTIONS

- To clean, wipe with a sponge and warm soapy water then wipe with a dry, clean cloth. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- Never use a pressure hose or washer to clean the product. Never use scourers, abrasives or chemical cleaners.
- Store the product in a cool, dry place. Before storage ensure that the product is clean and dry. We recommend the use of furniture covers to protect your product when not in use.
- Please note, the cushions are not waterproof and should not be left out in the rain.
- Please store the cushions in a cool, dry place when not in use.
- Please keep away from sources of extreme heat and naked flames.
- Periodically check all fixings to ensure none have come loose and re-tighten when necessary.
- Avoid sharp objects as these can damage or scratch the product.
- During bad weather and winter months, bring product indoors where possible or use a breathable furniture cover.

CONTACT

CUSTOMER SERVICES - EMAIL: CUSTOMER.SERVICE@DOBBIES.COM. TELEPHONE NUMBER: 0131 561 6406 OR CONTACT YOUR LOCAL STORE. DOBBIES GARDEN CENTRES LTD, MELVILLE NURSERY, LASSWADE, MIDLOTHIAN, EH18 1AZ