


ENTRY POP UP WITH SIDES

981842

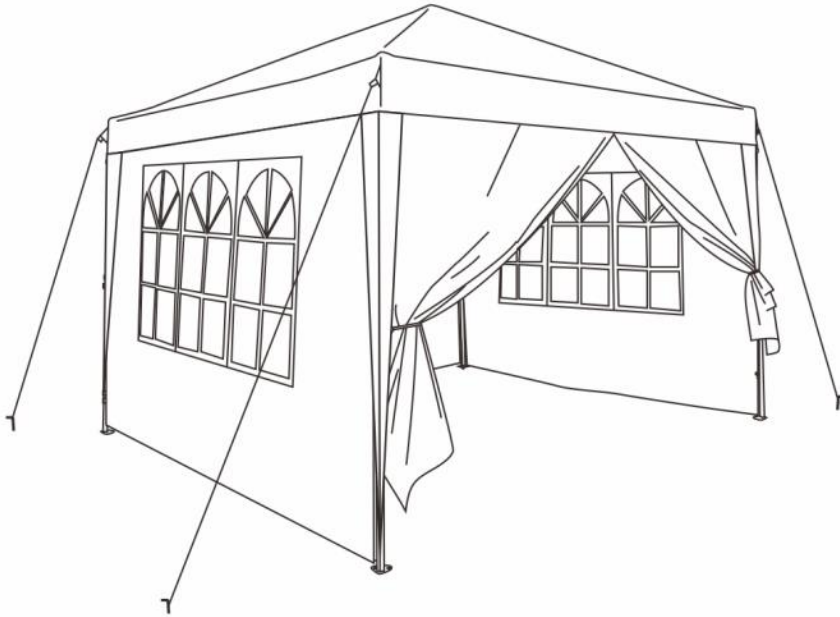

BEFORE YOU START







- Retain these instructions for future reference.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.

WARNINGS

- It is recommended that two people assemble this product.
- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- Keep small parts out of reach of children.
- Disassemble and store the product during windy weather.
- Gazebo should not be used in high winds or during inclement weather.
- Do not sit or stand on the product.

ASSEMBLY INSTRUCTIONS



PARTS AND FITTINGS SUPPLIED

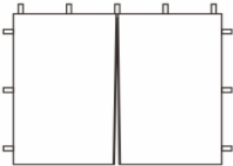REF	DESCRIPTION	ILLUSTRATION	QTY	REF	DESCRIPTION	ILLUSTRATION	QTY
1	GAZEBO		1	2	HOOK		8
3	TIE		4	4	BAG		1
5	SIDE WALL WITH ZIPPER		2	6	SIDE WALL WITH WINDOW		2


ASSEMBLY IMAGES & STEPS

STEP 1:


STEP 2:

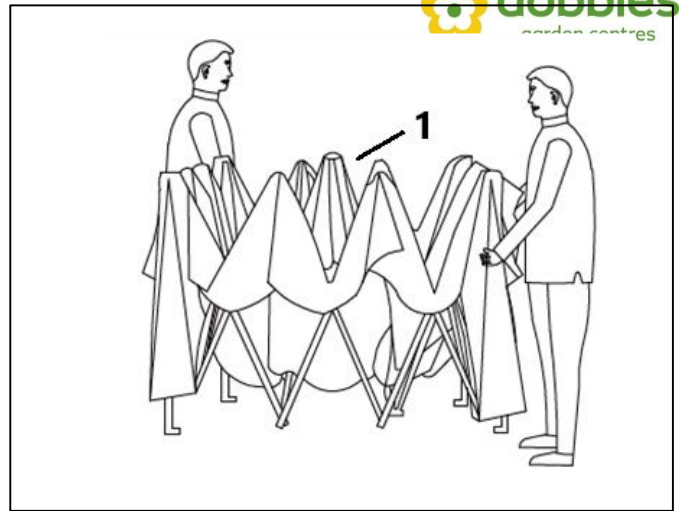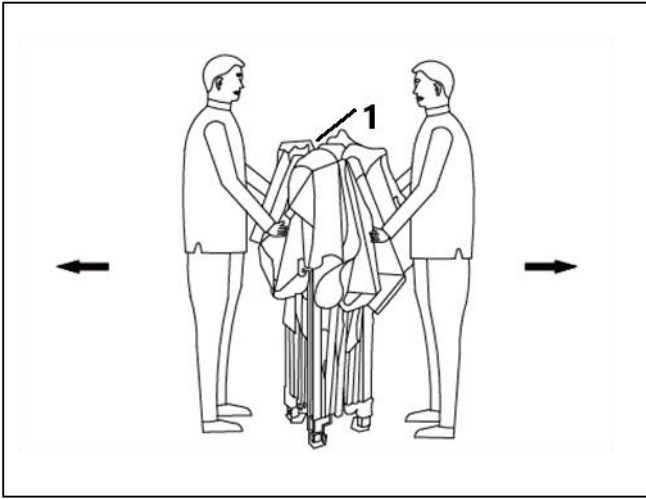

STEP 3:


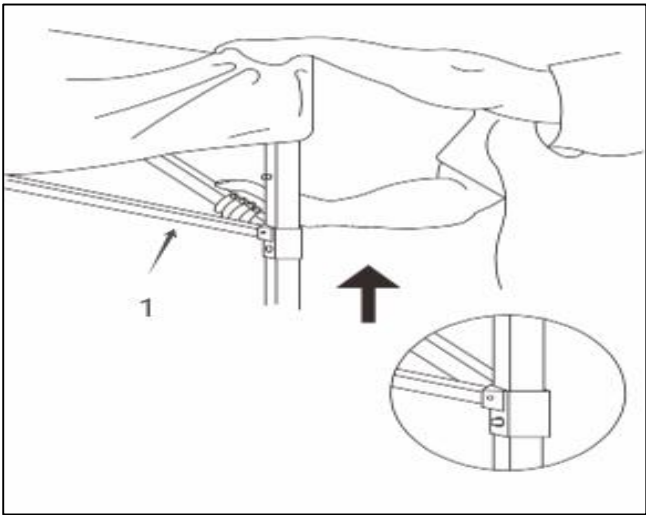


STEP 4:

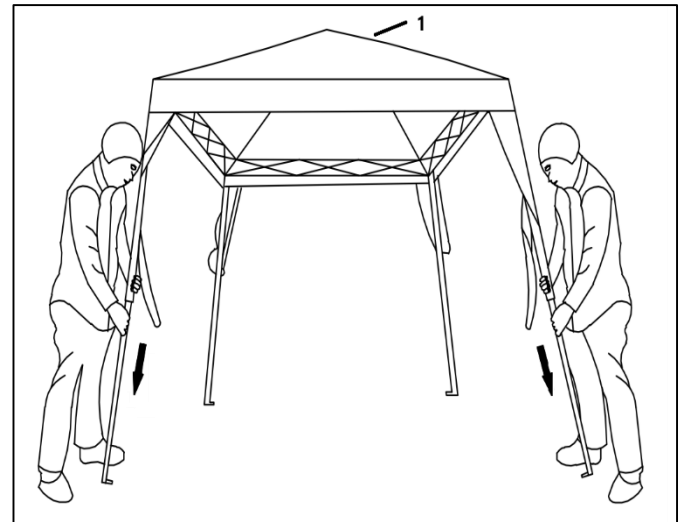



STEP 5:

STEP 6:

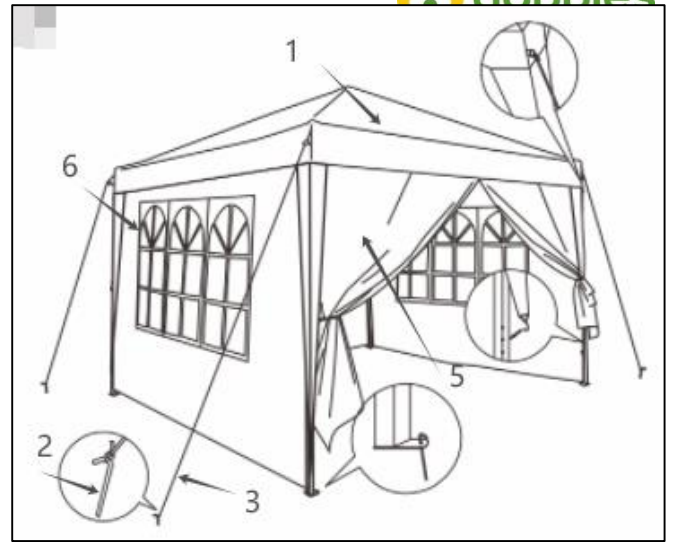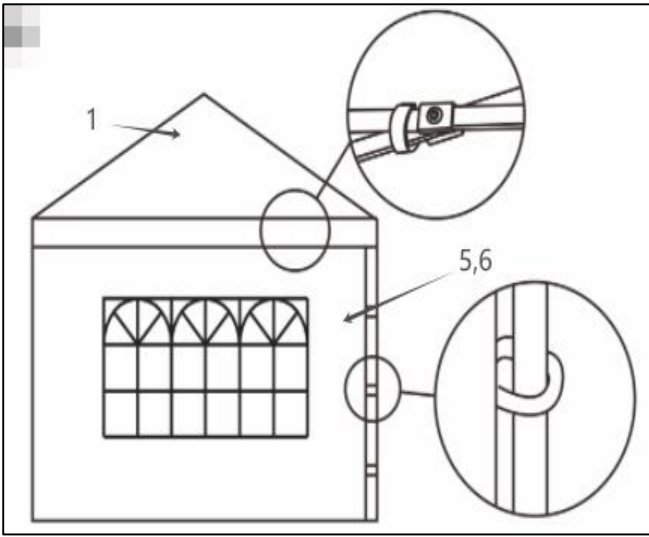



STEP 7:

STEP 8:

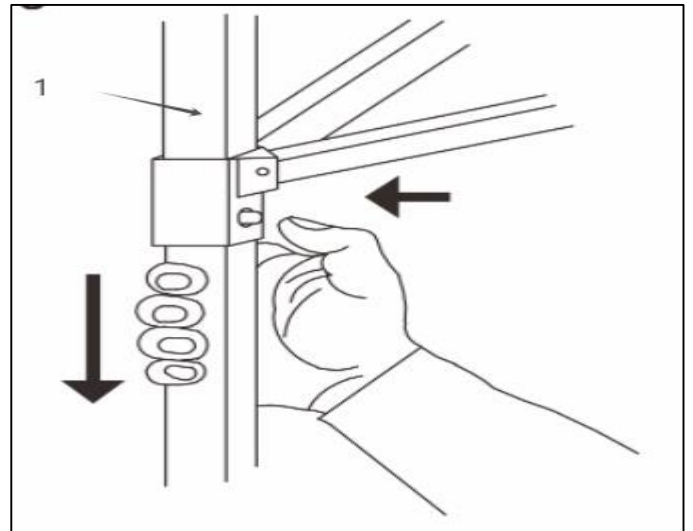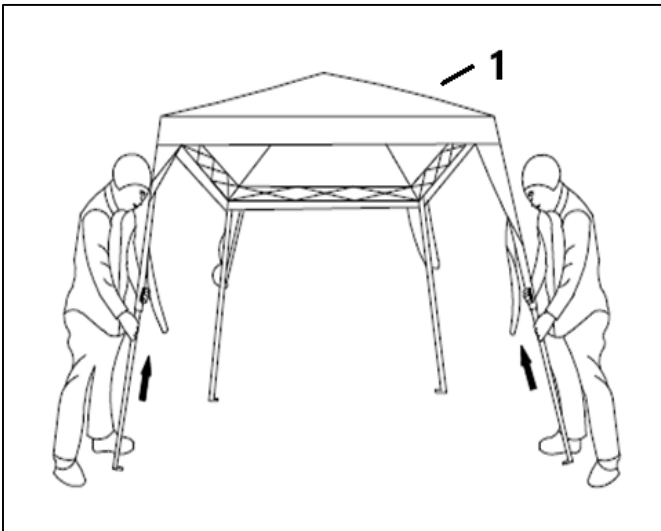

STEP 9:

STEP 10:

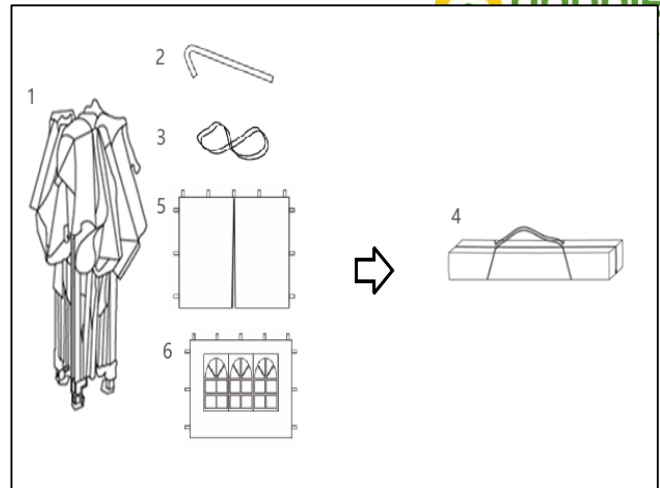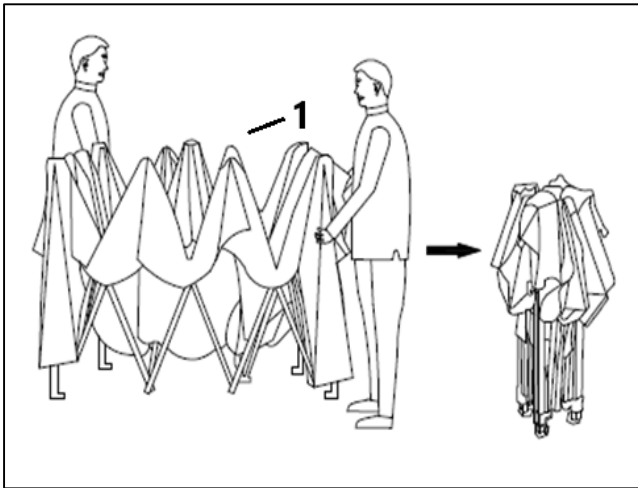

CARE INSTRUCTIONS

- To clean, wipe with a sponge and warm, soapy water then wipe with a dry, clean cloth. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
- Never use a pressure hose or washer to clean the product. Never use scourers, abrasives or chemical cleaners.
- The pole surface is powder coated. Do not use a wire brush when removing dirt from this item as it may damage the paint leaving the surface open to corrosion.
- Store the product in a cool, dry place. Before storage, ensure that it is clean and dry.
- Take down and put away the gazebo in windy or inclement weather.
- Only use gazebo in a wide, open space.
- Keep the gazebo away from fireworks and other flammable materials.
- Children should not assemble or disassemble the gazebo without sufficient adult supervision.
- Please keep away from sources of extreme heat and naked flames.

CONTACT

CUSTOMER SERVICES - EMAIL: CUSTOMER.SERVICE@DOBBIES.COM. TELEPHONE NUMBER: 0131 561 6406 OR CONTACT YOUR LOCAL STORE.

DOBBIES GARDEN CENTRES LTD, MELVILLE NURSERY, LASSWADE, MIDLOTHIAN, EH18 1AZ