


CHERRY COFFEE SET

359305

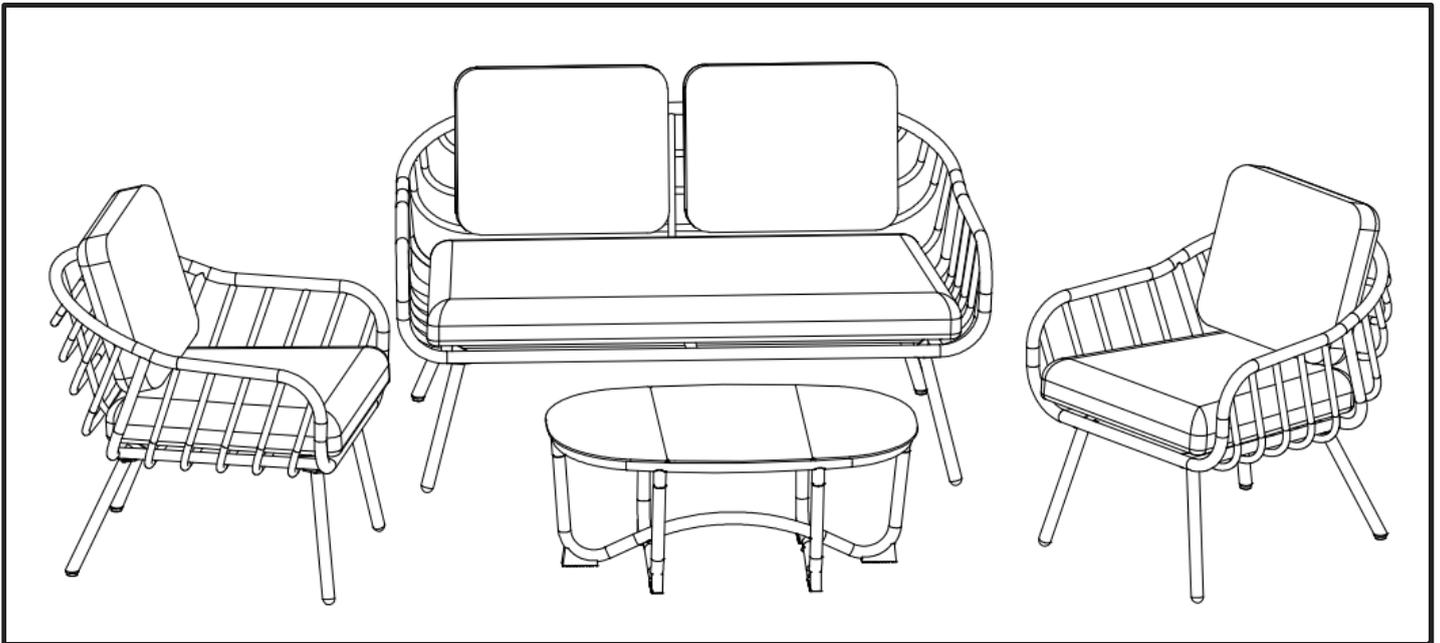

BEFORE YOU START

 
- Retain these instructions for future reference.
- When you are ready to start, make sure that you have plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.

WARNINGS

- Do not stand on the table, the chair or the sofa.
- Do not sit on the table.
- Do not overtighten screws or bolts.
- Do not tighten screws until fully assembled.
- Do not use this product if parts are missing, damaged or worn.
- Keep small parts out of reach of children.
- Do not use this product if parts are missing, damaged or worn.
- This product should only be used on firm, level ground.
- Make sure the legs remain in contact with the ground.
- This product is for domestic use only.
- Periodically, inspect and tighten all fixings to ensure the product remains secure.
- Each chair and each seat on the sofa is intended for a maximum weight of 110kg. Do not exceed this weight.


ASSEMBLY INSTRUCTIONS

CHAIR - PARTS SUPPLIED


REF	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Chair Frame	x2	
C	Front Legs	X4	
D	Back Legs	X4	
E	Screw	X24	
F	Screw Caps	X24	
G	Seat Pad	X2	
H	Back Cushion	X2	
K	Allen key	x1	

CHAIR - ASSEMBLY & IMAGES STEPS


Step 1

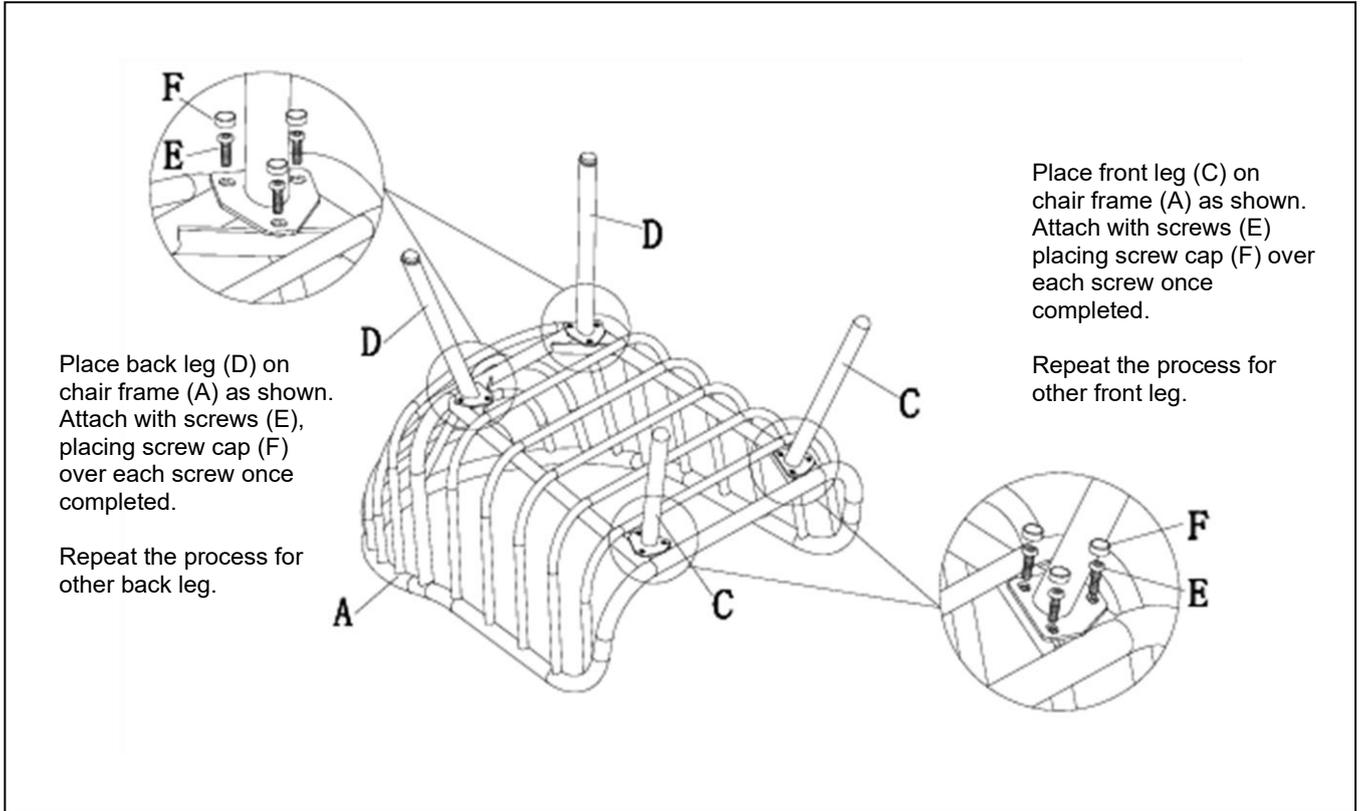




Step 2

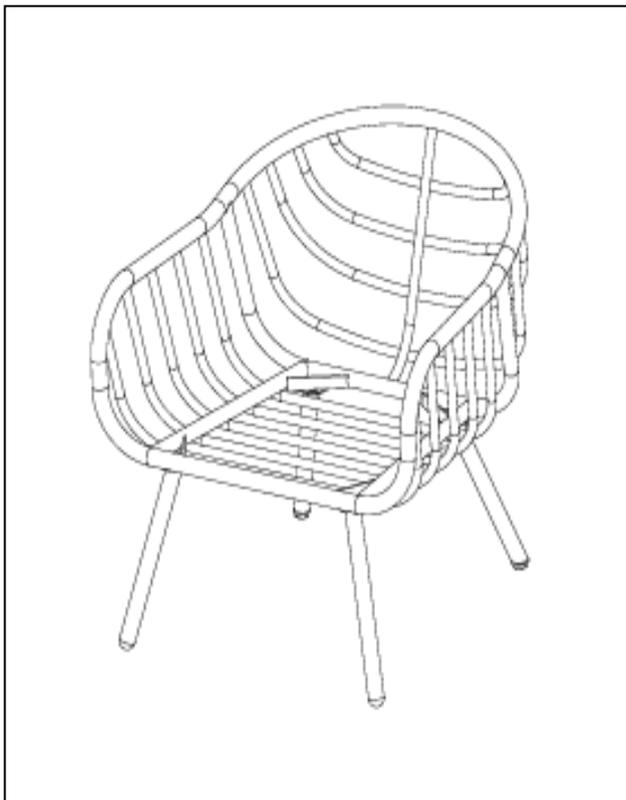

Step 3:

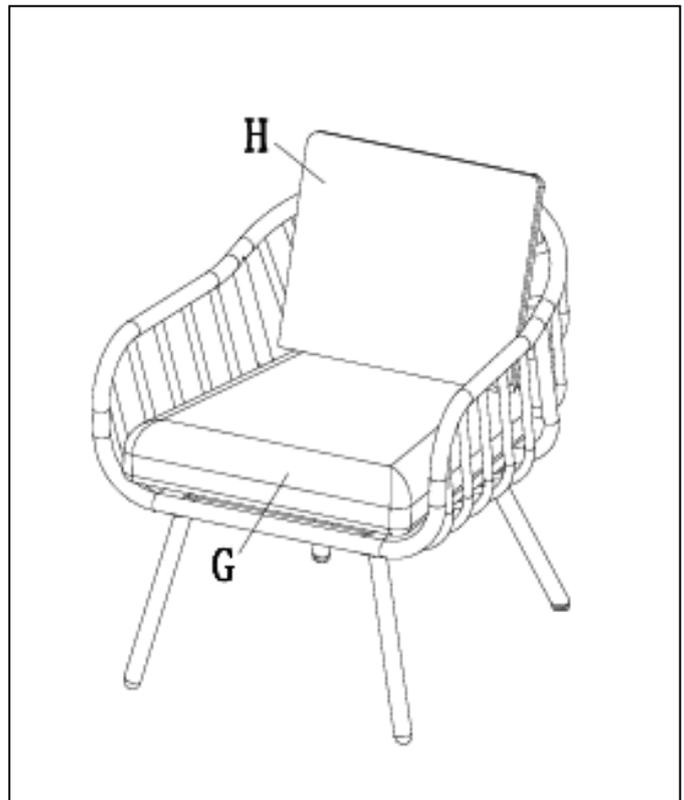


2 SEATER - PARTS SUPPLIED

   REF	DESCRIPTION	QUANTITY	ILLUSTRATION
B	Seater Frame	x1	
C	Front Legs	x2	
D	Back Legs	x2	
E	Screw	x12	
F	Screw Caps	x12	
I	Seat Pad	x2	
J	Back Cushion	x2	
K	Allen key	x1	

2 SEATER - ASSEMBLY & IMAGES STEPS

Step 1

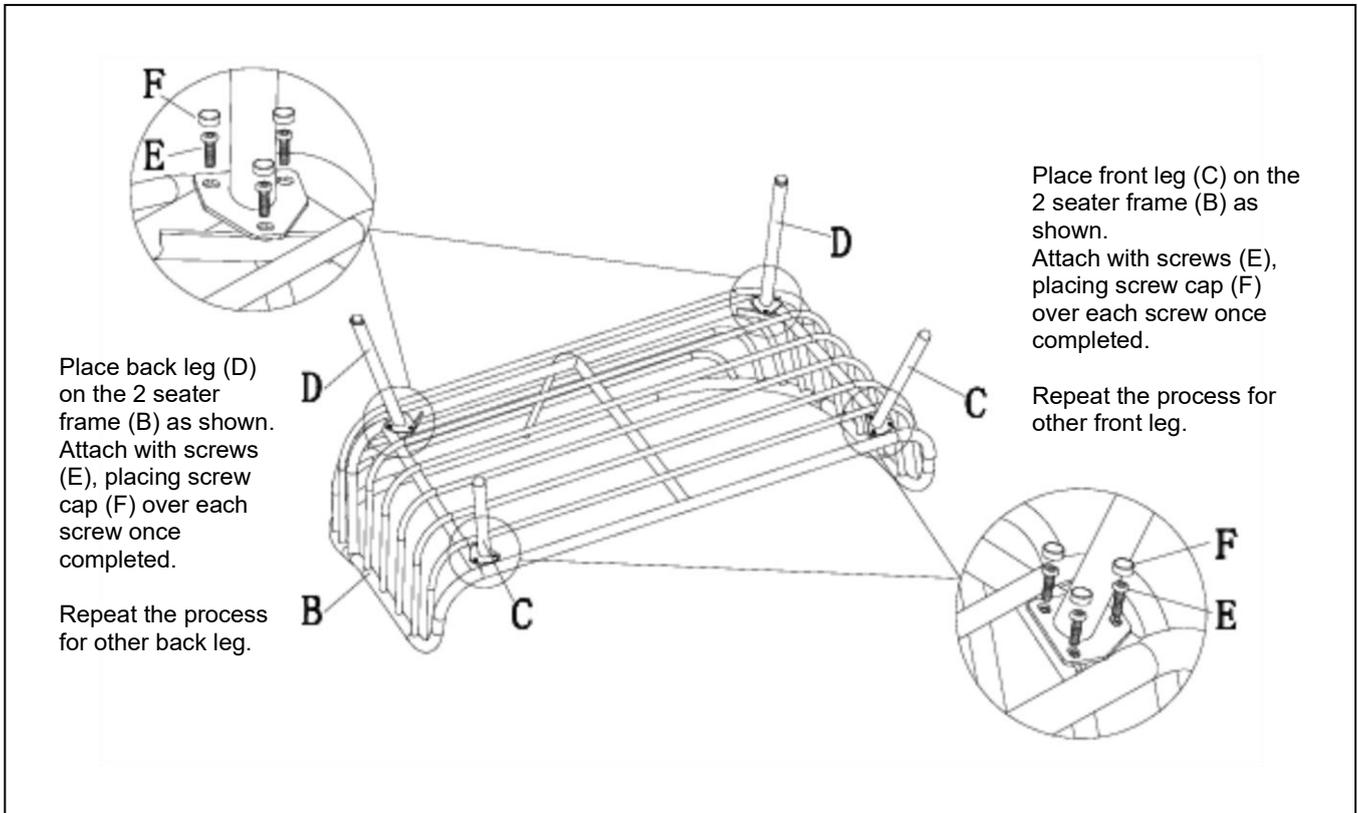

Step 2



Step 2


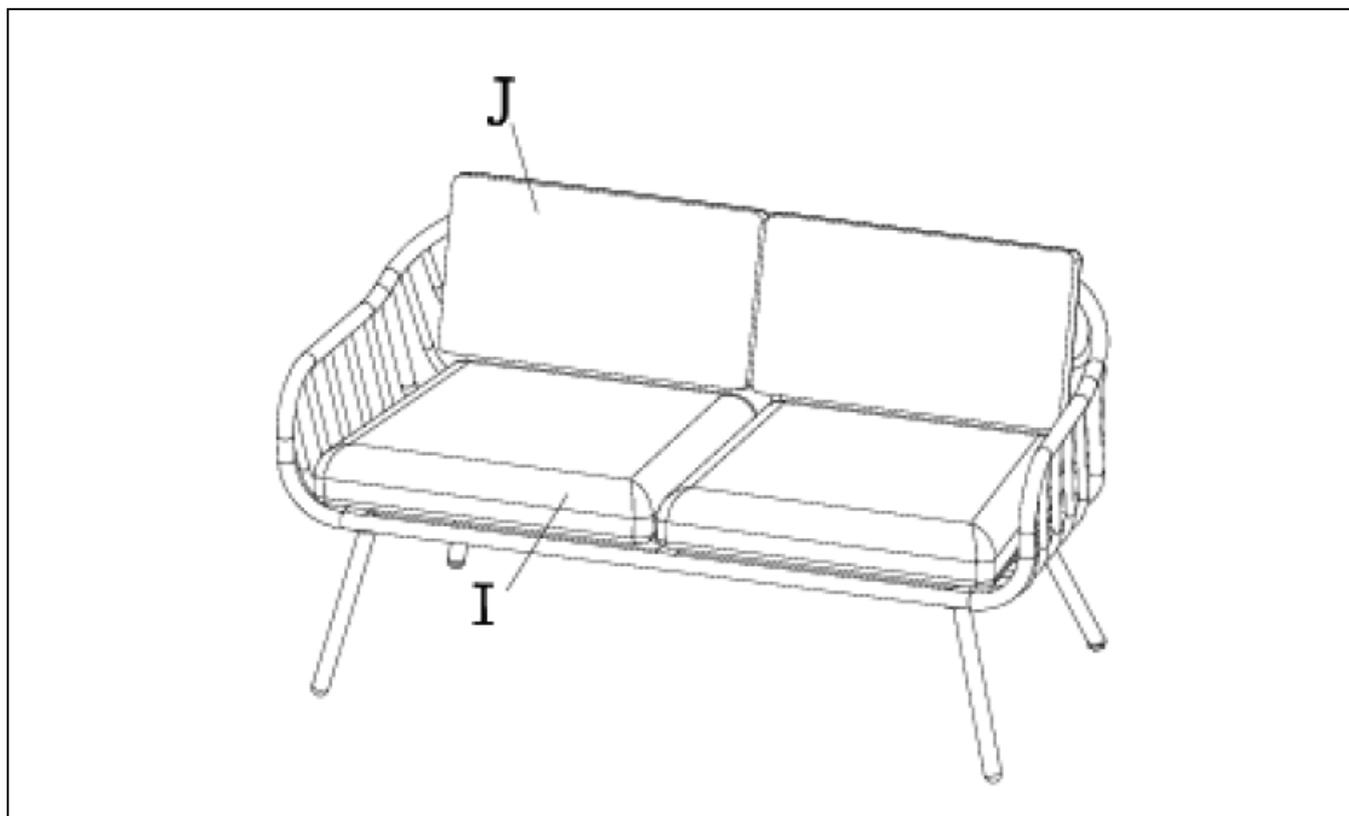



TABLE - PARTS SUPPLIED

REF	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Table top frame	x1	
B	Legs	x1	
C	Legs	x2	
D	Glass	x2	
E	Glass	x1	
F	Screw M6*10	x6	
G	Screw M6*32	X2	
H	Allen key	x1	
I	Screw Caps	X8	


Step 1

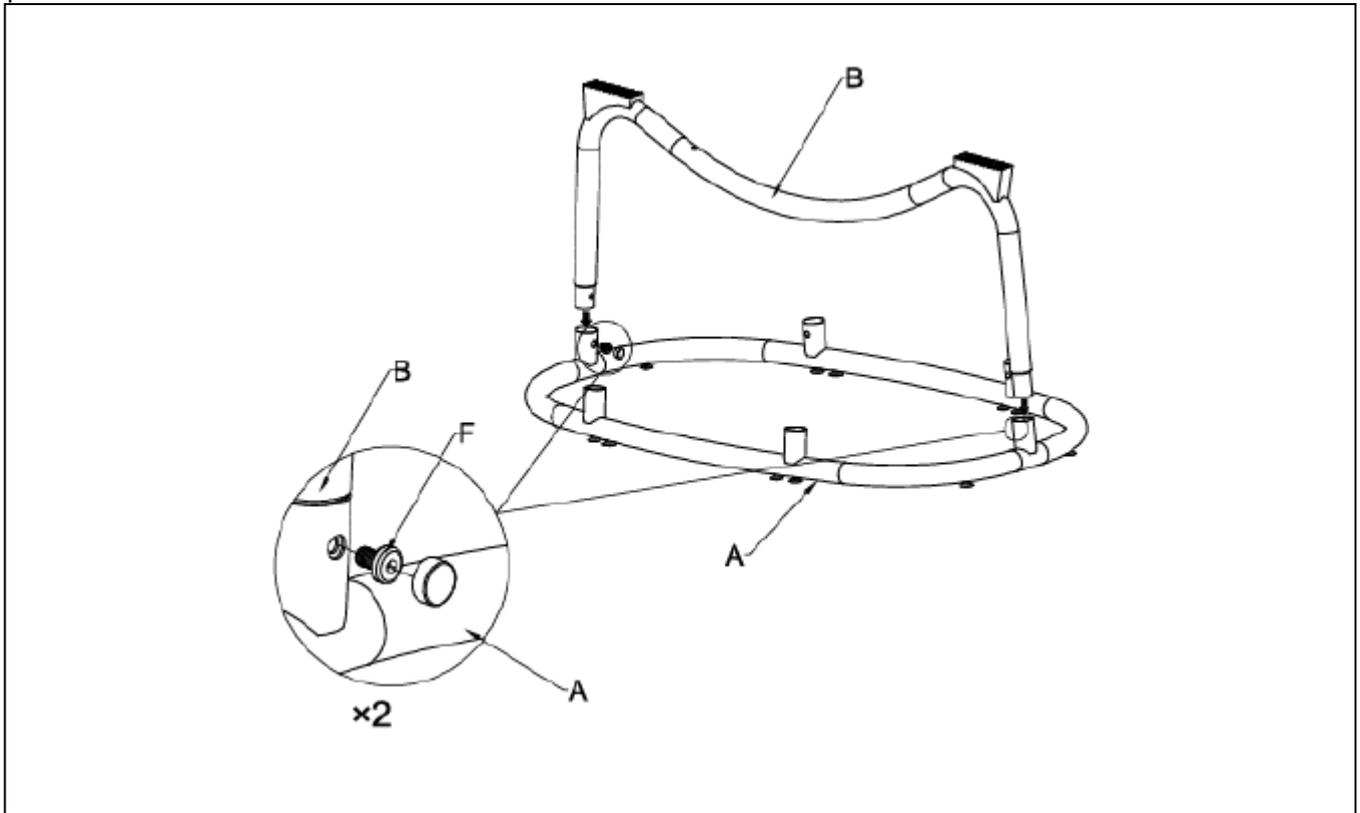

Step 2

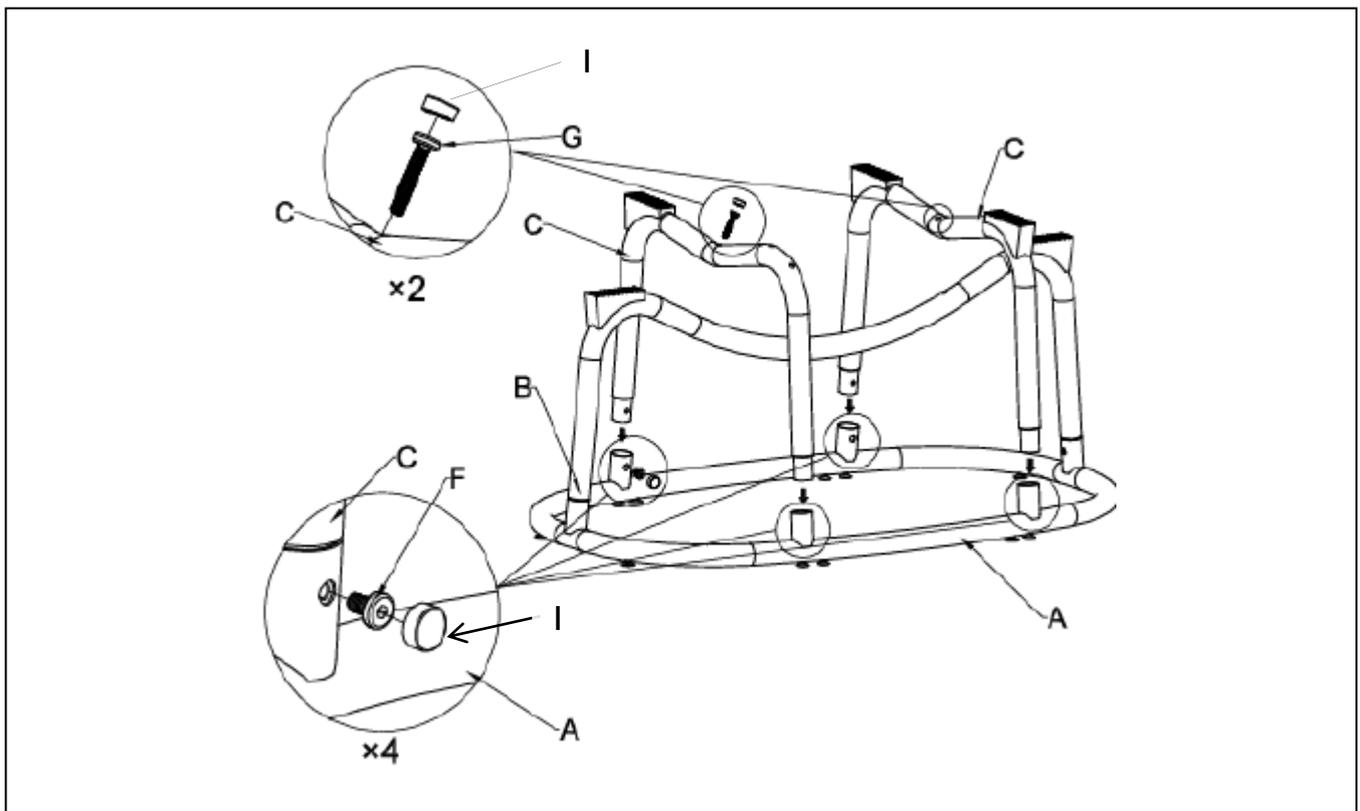

Step 3

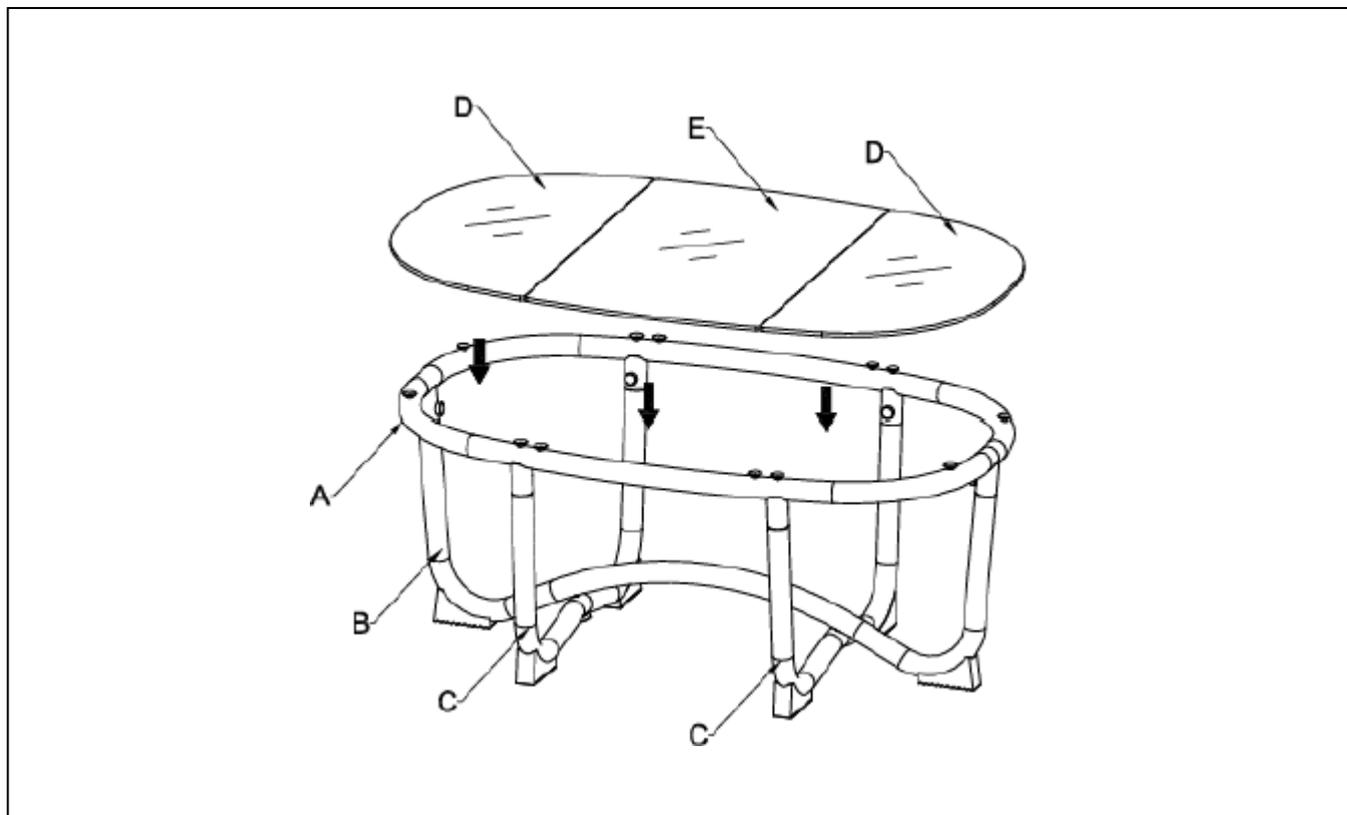

Step 4



CARE INSTRUCTIONS

- To clean, wipe with a sponge and warm, soapy water, then wipe with a dry, clean cloth. Do not use solvent-based cleaners or detergents as these will damage the look of the product.
- Never use a pressure hose or washer to clean the product. Never use scourers, abrasives or chemical cleaners.
- The metal is powder coated. Do not use a wire brush when removing dirt from this item as it may damage the paint leaving the surface open to corrosion.
- Store the furniture in a cool, dry place. Ensure that the furniture is clean and dry before putting into storage.
- We recommend the use of furniture covers to protect your product when not in use.
- Please note, the cushions are not waterproof and should not be left out in the rain. Please store the cushions in a cool, dry place when not in use.
- During bad weather and winter months, the product should be stored in a cool, dry place.
- Periodically check all fixings to ensure none have come loose and re-tighten when necessary.
- Please keep away from sources of extreme heat and naked flames.
- The warranty does not cover accidental damage/neglect or general wear and tear.